



## INSTALLAZIONE

Proporzionare, se necessario, la lunghezza delle aste, quindi, inserire alla loro estremità il puntale bloccandolo stringendo l'asta in corrispondenza delle gole con una pinza. Inserire i perni guida asta nelle apposite sedi, quindi inserire le aste nel montante facendole scorrere attraverso il foro presente sui perni. Per il montaggio della serratura, aprire il perno per permettere ai rinvii della stessa di retrarre permettendo così il suo inserimento nella sede.

Inserire la serratura facendo attenzione al corretto collegamento rinvio/asta a secondo del tipo di asta utilizzato:

- con aste versione ad attacco ad "infilare" (art. 93277 - schema A), inserendo l'asola dell'asta sul rinvio della serratura

- con aste versione ad "avvitare" (art. 93276/93322 - schema B), avvitando l'asta nell'apposita sede posta sul rinvio della serratura.

Fissare la serratura alla struttura utilizzando n°4 viti M4 (non in dotazione) provvisoriamente, per permettere una eventuale regolazione delle aste.

Effettuare, se necessario, le regolazioni di posizionamento, quindi fissare completamente la serratura al montante.

## INSTALLATION

If necessary, adjust the length of the bars, then insert the end-pieces at both ends and lock them by tightening with pliers.

Insert the bar guide pins in their seats, then insert the bars in the jamb by sliding them through the hole in the pins (if used).

To install the lock, open the pin to retract the returns so that the lock can be inserted in its housing.


Insert the lock in its housing, being careful to make the correct return/bar connection according to the type of bar used:

- with mortise-type bars (art. 93277 - diagram A), by inserting the bar slot into the lock return.

- with threaded bars (art. 93276/93322 - diagram B), by screwing the bar into its seat on the lock return.





Fix the lock to the structure TEMPORARILY by using the screws M4 (not supplied). Use the slotted holes so that the bars can be adjusted if necessary. Adjust the position of the lock if necessary and then fix it permanently to the structure.

Operation via retracting pin.

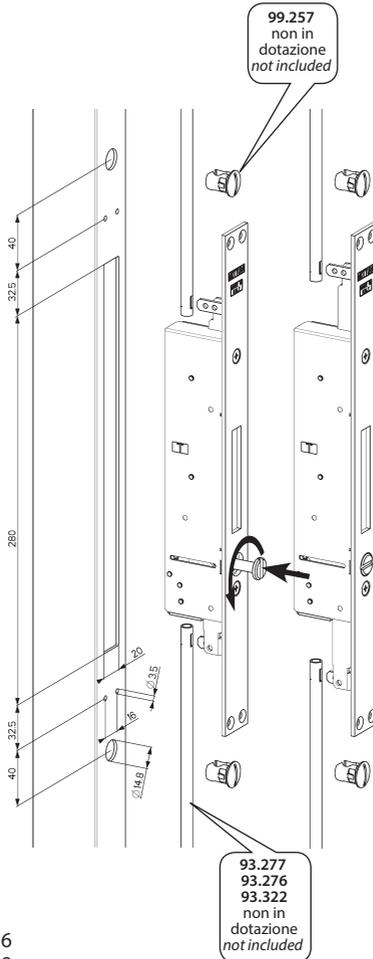

ASTE/BARS  
ART. 93277

ASTE/BARS  
ART. 93276 - M6  
ART. 93322 - M8

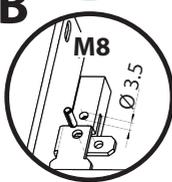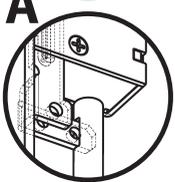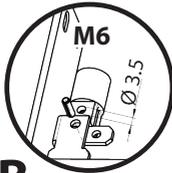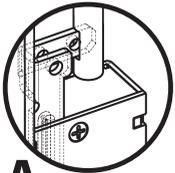

COMPANY WITH  
QUALITY SYSTEM  
CERTIFIED BY DNV GL  
= ISO 9001 =



safeguarding your security

MADE  
IN  
ITALY